




ASSEMBLY INSTRUCTIONS

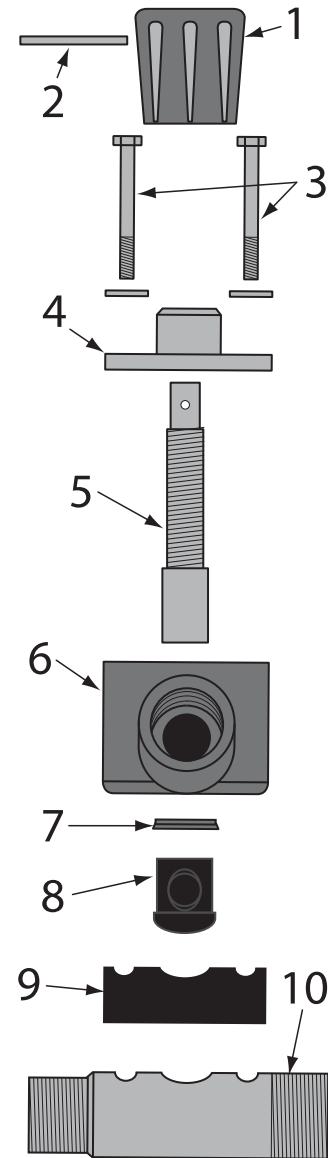

MPV (Manual Plunger Valve)

	2125-106	VALVE, MANUAL PLUNGER, 1", W/URETHANE SLEEVE
	2125-107	VALVE, MANUAL PLUNGER, 1-1/4", W/URETHANE SLEEVE
	2125-108	VALVE, MANUAL PLUNGER, 1-1/2", W/URETHANE SLEEVE
	2125-100-99	VALVE, MANUAL PLUNGER, REPAIR KIT W/URETHANE SLEEVE, INCLUDES # 2, 5, 7, 8 & 9
	2125-100-98	VALVE, MANUAL PLUNGER, SEAL KIT, W/URETHANE SLEEVE, INCLUDES 7, 8 & 9
1	2125-000-01	VALVE, MANUAL PLUNGER, KNOB
2	2125-000-04	VALVE, MANUAL PLUNGER, ROLL PIN
3	7010-505-56	VALVE, MANUAL PLUNGER, BOLT W/WASHER
4	2125-000-02	VALVE, MANUAL PLUNGER, CAP
5	2125-000-05	VALVE, MANUAL PLUNGER, PLUNGER
6	2125-000-06	VALVE, MANUAL PLUNGER, BODY
7	2149-000-06	VALVE, PLUNGER SEAL
8	2125-100-08	VALVE, MANUAL PLUNGER, SLEEVE, URETHANE
9	2125-000-09	VALVE, MANUAL PLUNGER, GASKET
10	2125-006-10	VALVE, MANUAL PLUNGER, PIPE NIPPLE 1" FEMALE x 1-1/2" MALE
	2125-007-10	VALVE, MANUAL PLUNGER, PIPE NIPPLE 1-1/4" MALE x 1-1/2" MALE
	2125-008-10	VALVE, MANUAL PLUNGER, PIPE NIPPLE 1-1/2" MALE x 1-1/2" MALE